



WIZZTM

HOW TO USE:

PREPARE



Know the size of your lawn before you begin, be sure not to overapply.

Read and follow all Directions for Use on the label of the product that you are applying.

FILL



Designed to hold enough product to cover up to 170m².

SET



Turn the orange dial to correct setting, see settings on right.

GO



Begin walking and pull trigger to apply product. Be sure to walk at a steady pace (1.5 metres per second).

For more information visit:

evergreen-lawn.co.uk
or call +44 (0)1276 401 300

© 2016, Evergreen Garden Care UK Ltd,
1 Archipelago, Lyon Way, Frimley,
Surrey GU16 7ER.


SPREADER SETTINGS:

Product	Spread width	Dial setting
EverGreen Complete 4 in 1	1.5m	5.25
EverGreen Extreme Green	1.5m	5
EverGreen Mosskil with lawn food	1.5m	5
EverGreen Autumn lawn care	1.5m	5
Scotts Lawn Builder Lawn Food plus Weed Control	1.5m	4.25
Scotts Lawn Builder Lawn Food	1.5m	4.25
Scotts Lawn Builder Autumn Lawn Food	1.5m	4
EverGreen Multi Purpose Grass Seed	0.8m	5.75*
Salt/Ice Melt	1.5m	9

* go over lawn twice

For a complete list of products and settings
visit: evergreen-lawn.co.uk

HOW TO APPLY:

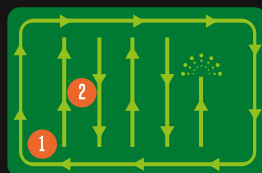

- 1 Make perimeter pass with EdgeGuard[®] on to protect non-lawn areas.
- 2 Make parallel internal passes 1.5 metres (depends on the spread width e.g. multi purpose grass seed @ 0.8m) apart to ensure even coverage.
- 3 Never leave product in the spreader. Pour leftover materials back into the package, seal tightly and store in a dry place.
- 4 After each use, rinse thoroughly to remove all material clinging to the spreader. Allow the spreader to dry thoroughly before storage or re-use.

Before disposing rinse the spreader through with water
and dispose of at a local amenity recycling site.